

BLIEK ROUND

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

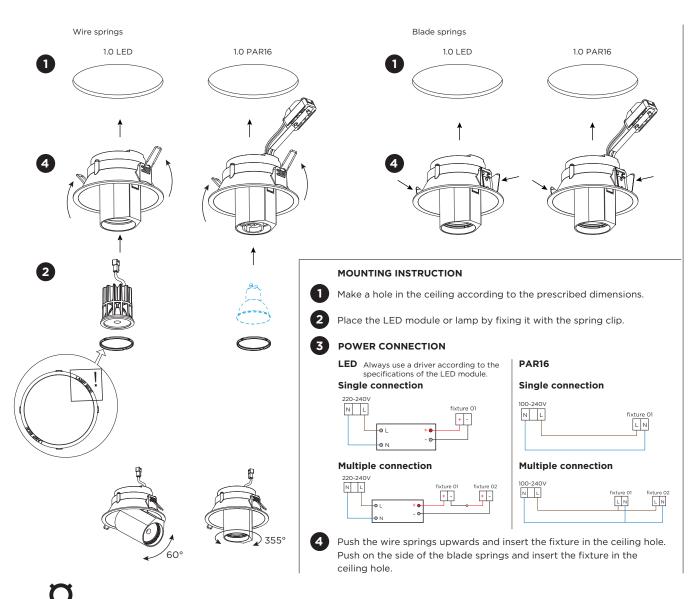

WEVER & DUCRÉ

LIGHTING

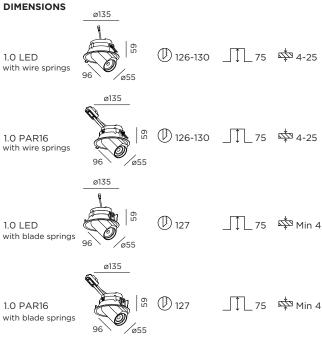





Driver must be powered off before connecting cables.


Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.




19-010-673-00

BLIEK ROUND

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

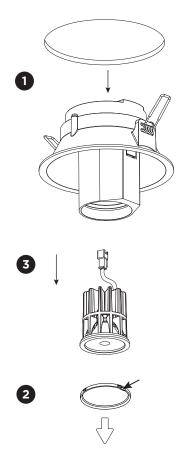

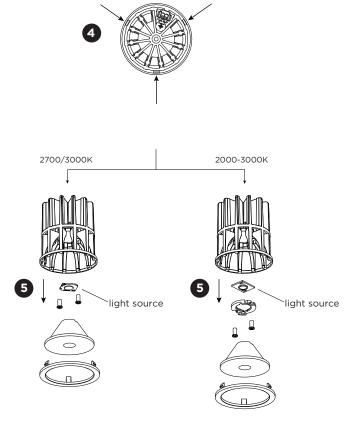



- Take the luminaire out of the ceiling hole and unplug the connector.
- 2 Push in the slot of the spring clip and pull it down.
- 3 Remove the LED module from the luminaire.
- 4 Push at the three points to loosen the front ring.
- **5** Take out the lens and unscrew the holder or light source to remove it.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class D.