




#### INSTALLATION INSTRUCTIONS | APRIL 2025

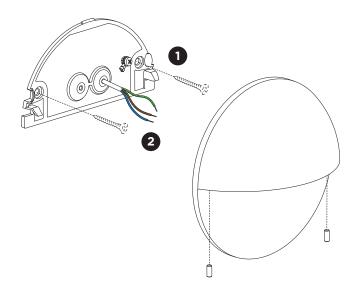

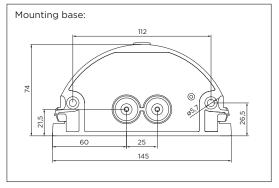

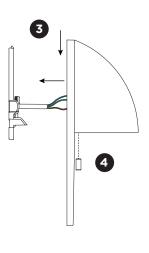



# Always use a matching grommet in the overview table.

use pin to make hole, not a knife	A	B	C
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm <sup>2</sup> 2or3x 1.0mm <sup>2</sup> 2or3x 1.5mm <sup>2</sup>	2or3x 0.75mm <sup>2</sup> 2x 1.0mm <sup>2</sup>	0.75mm <sup>2</sup> 1.5mm <sup>2</sup>

### **DIMENSIONS**




### MOUNTING INSTRUCTION

Remove the mounting base by loosening the socket screws and fix it to the wall with screws (screws are not included).

2 POWER CONNECTION


Connect to 220-240V.

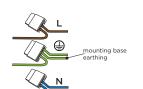

Connect the earth cable.



Always use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table. for example:

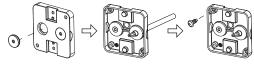

Push the grommet into the back plate.


Pull the cable through the back plate.


Mount the back plate on the wall.

**3** Fit the housing to the mounting base and push it down to secure it.

4 Fix the socket screws.



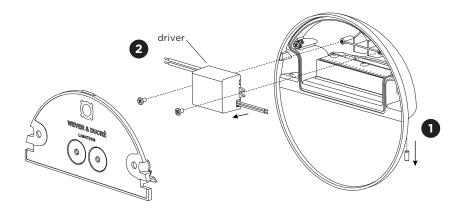

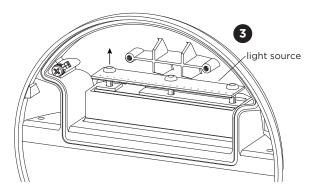





## DISMOUNTING AND RECYCLING INSTRUCTIONS

Dismount the fixture from the mounting base by loosening the socket screws and sliding it upwards to unlock.

Disconnect the wires and unscrew the driver to remove it.

Loosen the wires and remove the light source by pulling up.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



The driver can be replaced by the end user.



This luminaire contains a light source with the energy class XX.



Use green electricity to light up your luminaire.