

RIBELLE wall

INSTALLATION INSTRUCTIONS | MARCH 2025

Horizontal

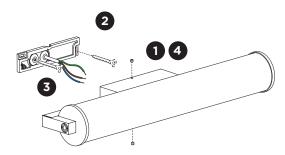

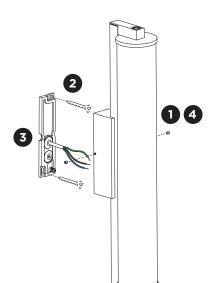


Vertical



Always use a matching grommet in the overview table.

| use pin to make hole, not a knife | A | B | C |
|---|---|--|---|
| CABLE | | | |
| TYPE | ROUND H05RN-F H07RN8-F H07RN-F | ROUND H05RN-F | ROUND |
| OUTSIDE Ø | min 6.8mm max 8.9mm | min 5mm max 6.8mm | min 1.5mm max 2.6mm |
| CONDUCTION SECTION | 2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ² | 2or3x 0.75mm ² 2x 1.0mm ² | 0.75mm ² 1.5mm ² |

 DIMENSIONS



MOUNTING INSTRUCTION

- Remove the mounting base from the fixture by loosening the socket screws.
- 2 Mount the base on the wall with screws (screws are not included).
- 3 POWER CONNECTION

 
Connect to 220-240V.

mounting base earthing

Connect the earth cable.



Always use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.



Push the grommet into the back plate.


Pull the cable through the back plate.


Mount the back plate on the wall.


4 Fix the luminaire on the base with the socket screws.


RIBELLE wall


INSTALLATION INSTRUCTIONS | MARCH 2025

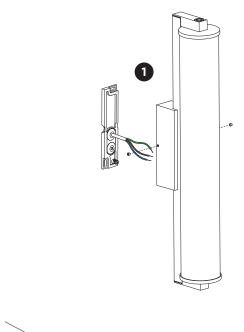

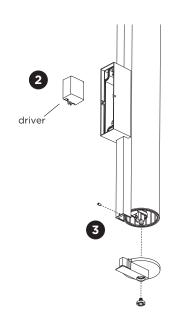

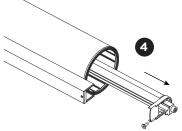

 

 



DISMOUNTING AND RECYCLING INSTRUCTIONS Light source & driver

- Dismount the fixture from the base by removing the socket screws.
- 2 Remove the driver.
- 3 Loosen the socket screw and remove the cover by unscrewing the screw.
- 4 Pull out the profile and loosen the screw of the fixation part.
- Remove the fixation part and pull off the plastic cover.
- 6 Unscrew the light source to remove it.



The light source is replaceable by Wever & Ducré or by a professional with explicit authorisation. For more information please contact your local Wever & Ducré customer service point.



The driver can be replaced by the end user.



This luminaire contains a light source with the energy class E.



Use green electricity to light up your luminaire.

