
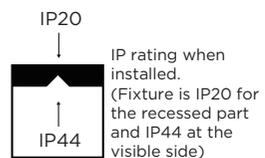


# RINI SNEAK IP44


INSTALLATION INSTRUCTIONS | DECEMBER 2022

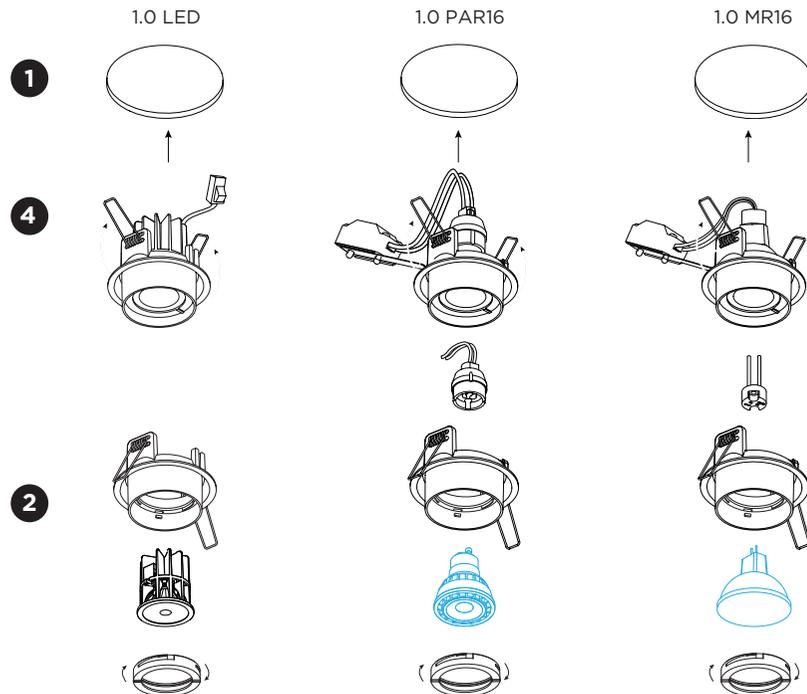

**!** Driver must be powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.

## DIMENSIONS

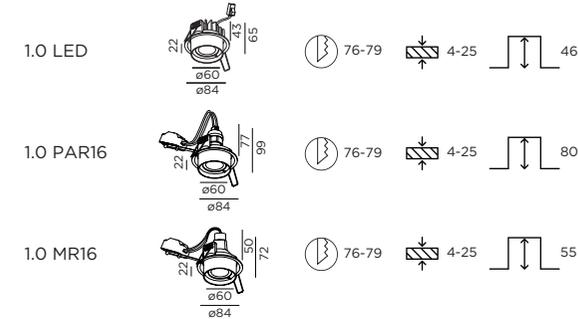

## MOUNTING INSTRUCTION

- 1 Make a hole in the ceiling according to the prescribed dimensions.
- 2 Mount the light source in the housing and fix it with the front ring by turning it a quarter clockwise.

## 3 POWER CONNECTION

**LED** Always use a driver according to the specifications of the LED module.

### Single connection



### Multiple connection



### PAR16

#### Single connection

 


#### Multiple connection




### MR16

#### Single connection




#### Multiple connection

 

- 4 Push up the springs and insert the fixture in the ceiling hole.

# RINI SNEAK IP44


INSTALLATION INSTRUCTIONS | DECEMBER 2022

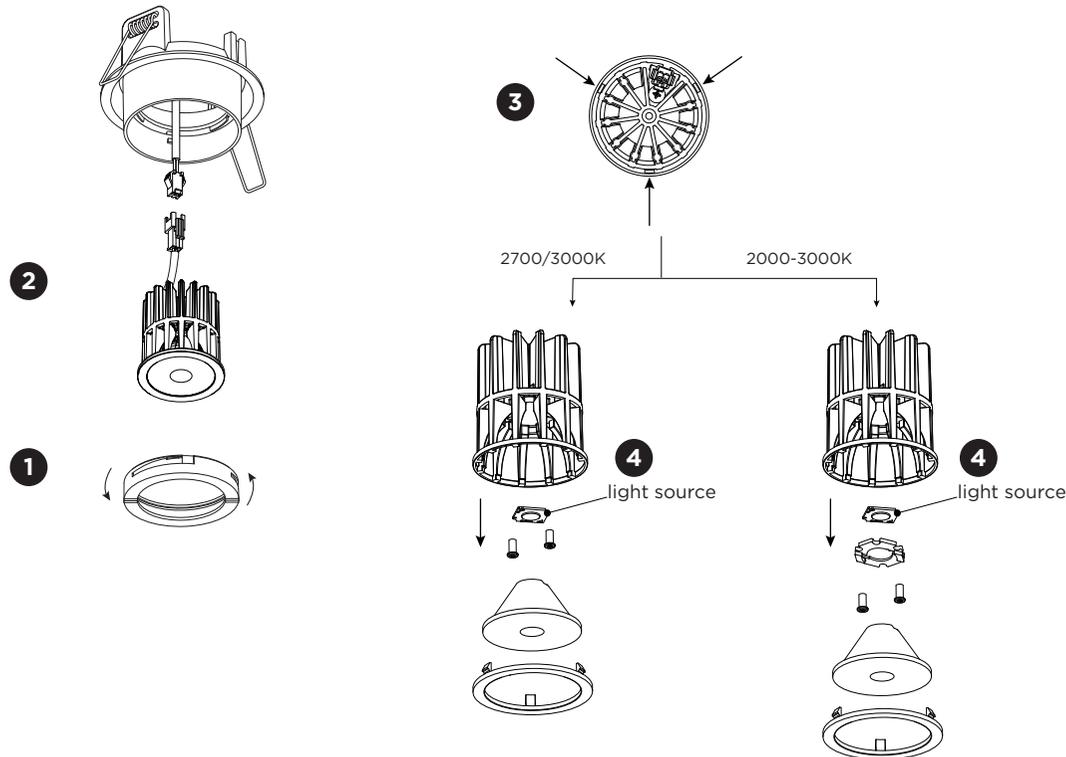

## DISMANTLING AND RECYCLING INSTRUCTIONS

Light source

 - 1 Hold and turn the front ring counterclockwise to remove the LED module.
- 2 Unplug the LED module to remove it from the luminaire.
- 3 Push at the three points to loosen the front ring.
- 4 Take out the lens and unscrew the light source to remove it.



The light source is replaceable by an authorized professional.  
For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class D.