

INSTALLATION MANUAL

68004

ecolight



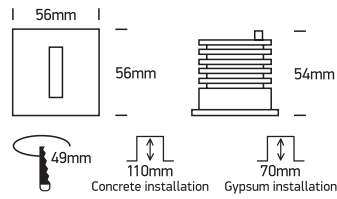
DARK LIGHT



350mA | 3W | IP54 | Aluminium | Recessed

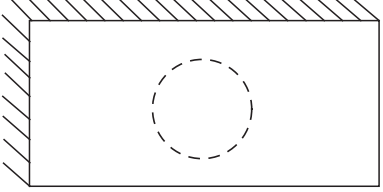
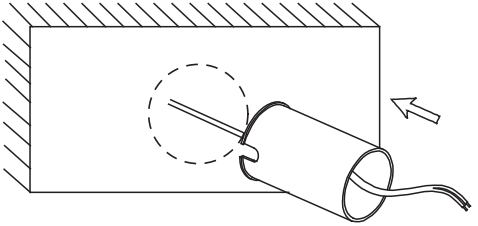
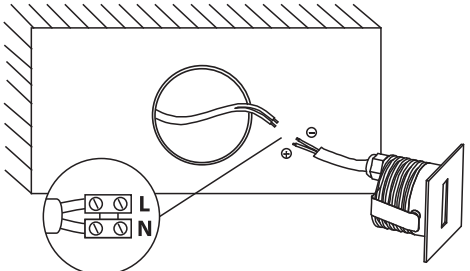
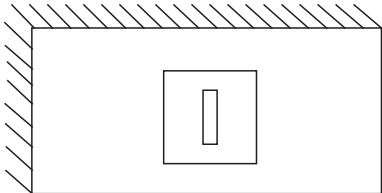
Requires 350mA driver.
Supplied with box for concrete installation.

90 CRI

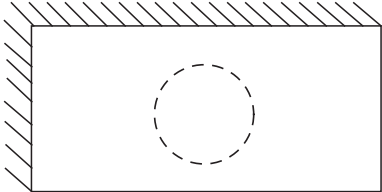
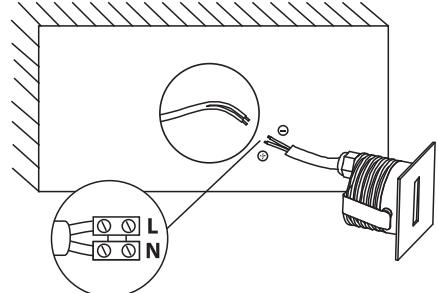
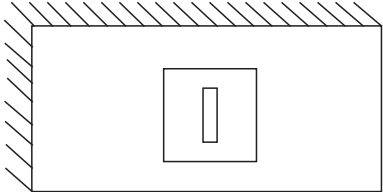


one
LIGHT

FOR CONCRETE INSTALLATION

<p>A</p>  <p>Hole required with diameter 49mm.</p>	<p>B</p>  <p>1. Insert cable through wall box 2. Insert wall box into the wall and secure with cement.</p>
<p>C</p>  <p>Connect and terminate wires to the terminal block connector.</p>	<p>D</p>  <p>Secure the fitting into the wall box.</p>

FOR GYPSUM INSTALLATION

<p>A</p>  <p>Mark gypsum board and cut hole with diameter 49mm.</p>	<p>B</p>  <p>Connect and terminate wires to the terminal block connector.</p>	<p>C</p>  <p>Install provided kit for gypsum board and insert fitting into the board until the clips snap into place.</p>
---	--	---

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.