


Parts needed to assemble and mount the M13 fastener set

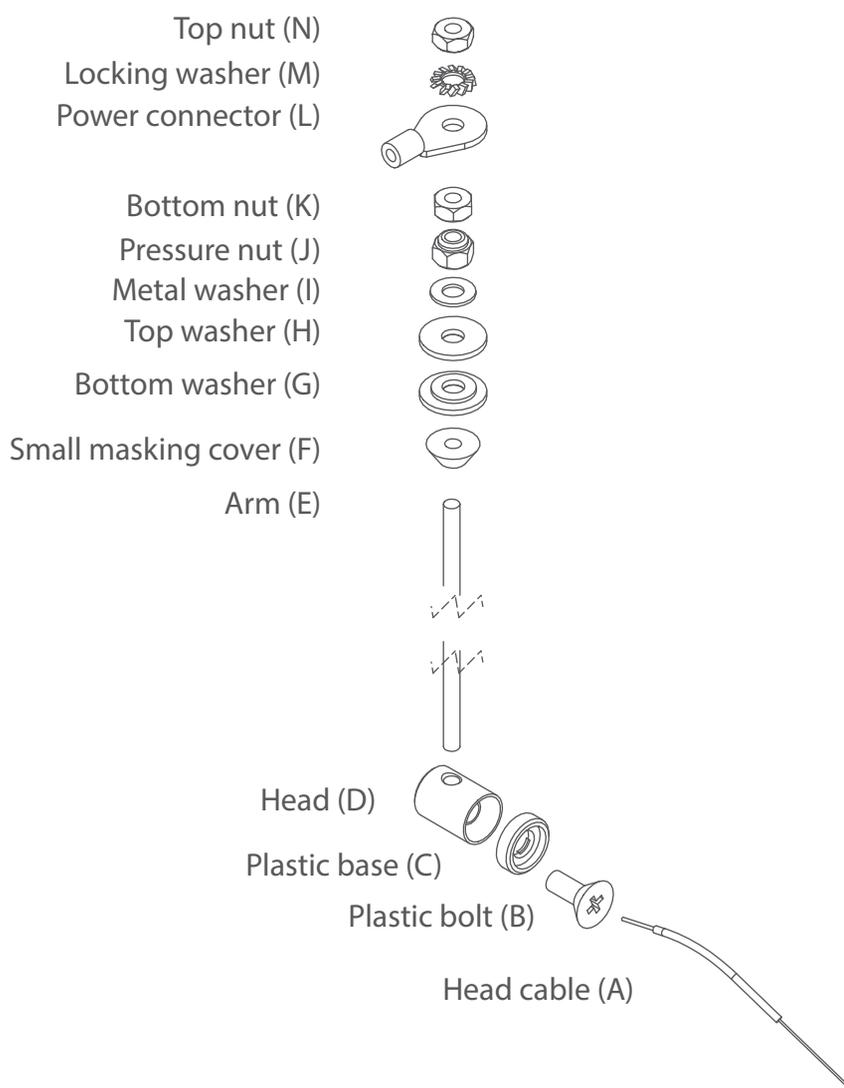


Tools needed for mounting:


- allen wrench
- drill
- pliers

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu/uk.


1. Drill a hole with a diameter of 3 mm in the mounting surface. The hole must be next to the cable with a single pole. Connect the end of the cable to the power connector (L).

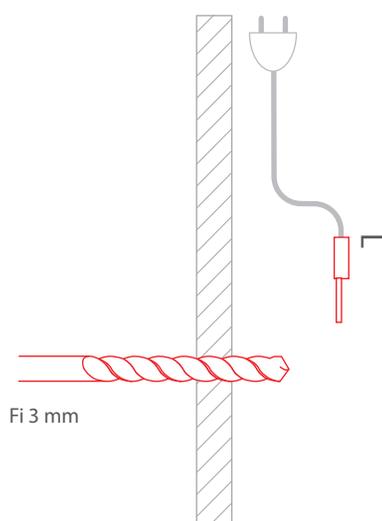


2. Put the small masking cover (F) and bottom washer (G) onto the arm (E). Insert the arm into the drilled hole. On top of put the top washer (H), metal washer (I) and tighten the pressure nut (J).

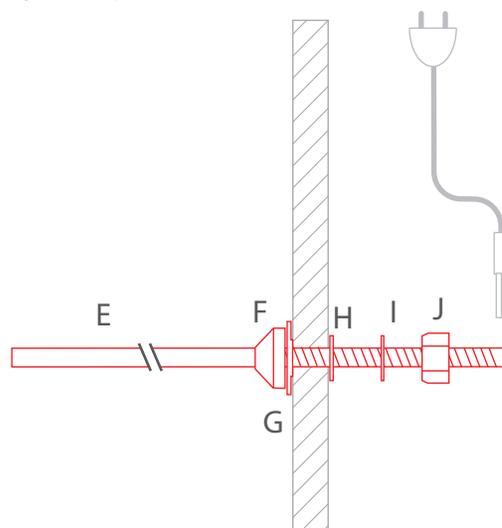


3. Onto the top of the arm put the bottom nut (K), power connector (L), locking washer (M), and top nut (N).

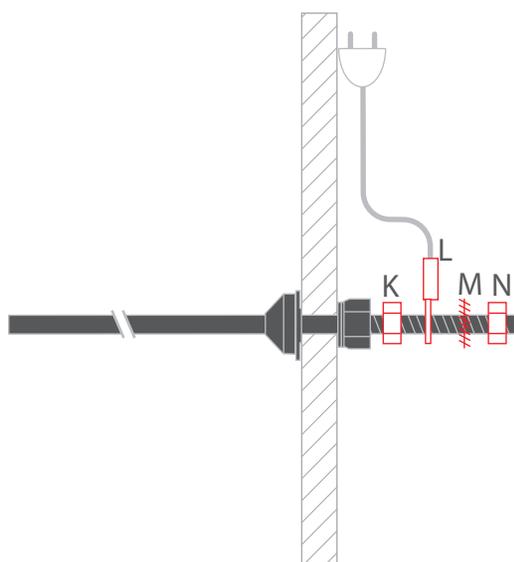

4. Insert the plastic bolt (B), from the top put on the plastic base (C) and conductive head (D).

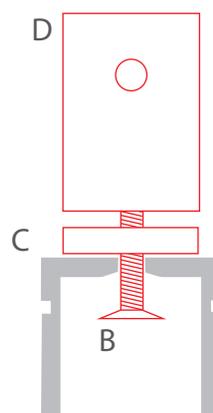

5. Run the cable (A) through the hole in the plastic bolt and head. Connect the LED power.

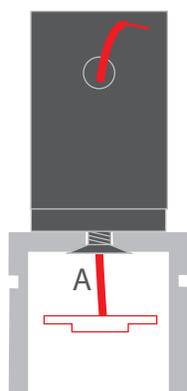

6. Mount the light fixture on the arm (E). Block the arm by tightening the pressure screw in the top head with the Allen wrench.

