



# MATCH TRIMLESS ceiling recessed

INSTALLATION INSTRUCTIONS | MARCH 2023

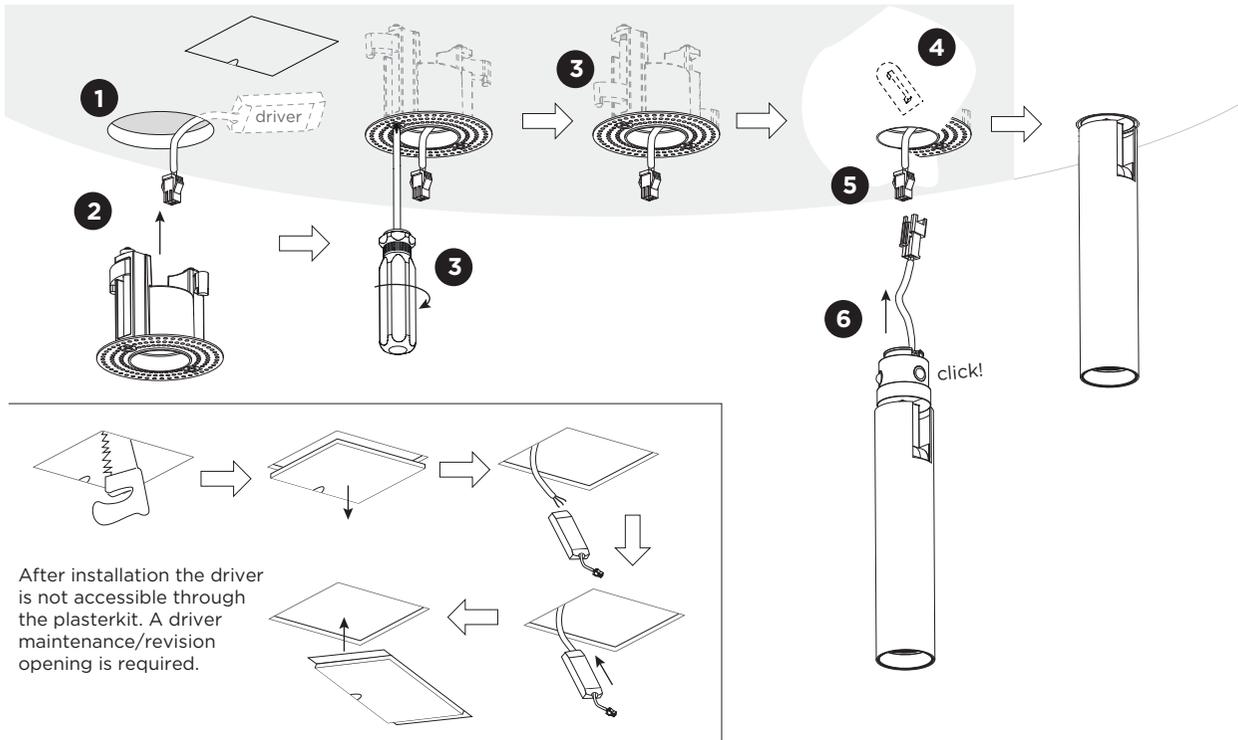

## DIMENSIONS

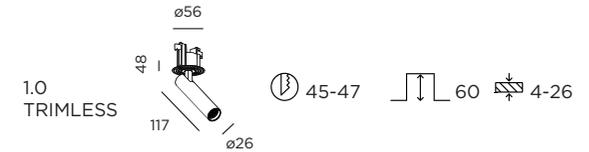


## MOUNTING INSTRUCTION


- 1 Make a hole in the ceiling according to the prescribed dimensions.
- 2 Insert the plasterkit in the hole.
- 3 Tighten both screws. The plasterkit will clamp itself into the ceiling.
- 4 Plaster and paint the surface.
- 5 POWER CONNECTION

Always use a driver according to the specifications of the LED module.

### Single connection


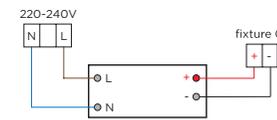


### Multiple connection

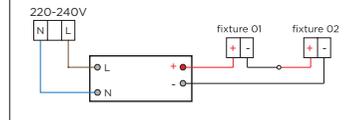


- 6 Click the fixture into the plasterkit hole.

After installation the driver is not accessible through the plasterkit. A driver maintenance/revision opening is required.

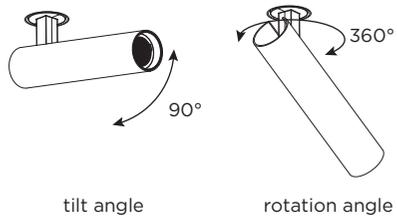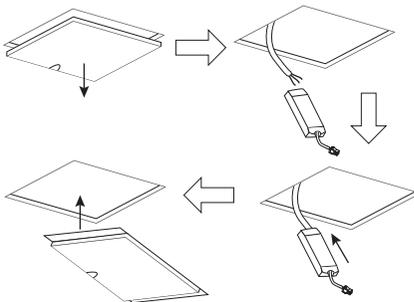

Driver must be powered off before connecting cables.


Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.

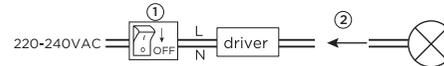

Only to be installed outside arms reach.

# MATCH TRIMLESS ceiling recessed

INSTALLATION INSTRUCTIONS | MARCH 2023

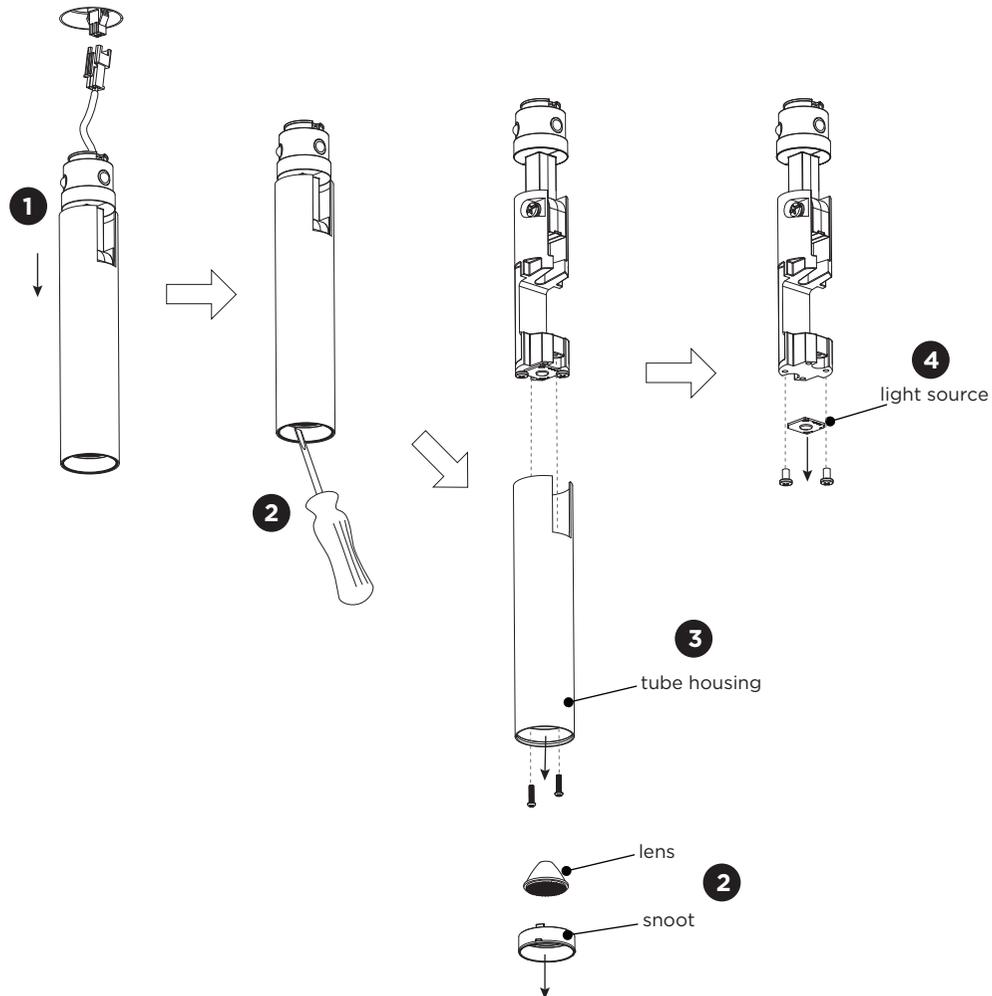

## DISMOUNTING AND RECYCLING INSTRUCTIONS

### Light source

- 1 Remove the fixture from the ceiling by pulling and loosen the connector.
- 2 Pull out the snoot using any available tools and remove the lens.
- 3 Unscrew the screws and remove the tube housing.
- 4 Unscrew the screws, loosen the wiring and remove the light source.



The light source is replaceable by an authorized professional.  
For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.