



PIRRO petit ceiling recessed

INSTALLATION INSTRUCTIONS | AUGUST 2022

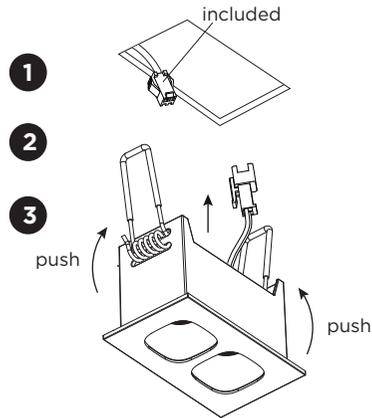

DIMENSIONS

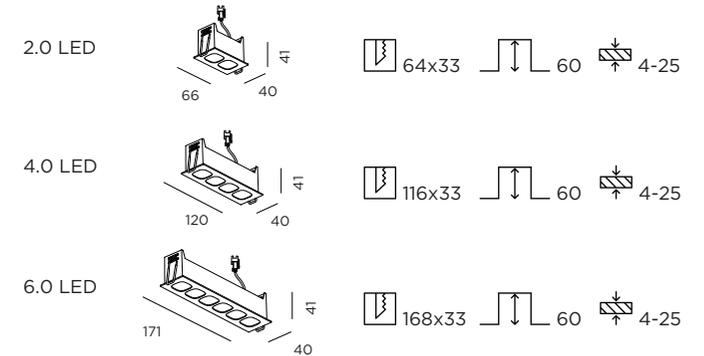


MOUNTING INSTRUCTION

1 Make a hole in the ceiling according to the prescribed dimensions.

2 POWER CONNECTION

Always use a driver according to the specifications of the LED module.



SERIAL CONNECTION




3 Push the springs up and insert the fixture in the ceiling hole.

Driver must be powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.

PIRRO petit ceiling recessed


INSTALLATION INSTRUCTIONS | AUGUST 2022

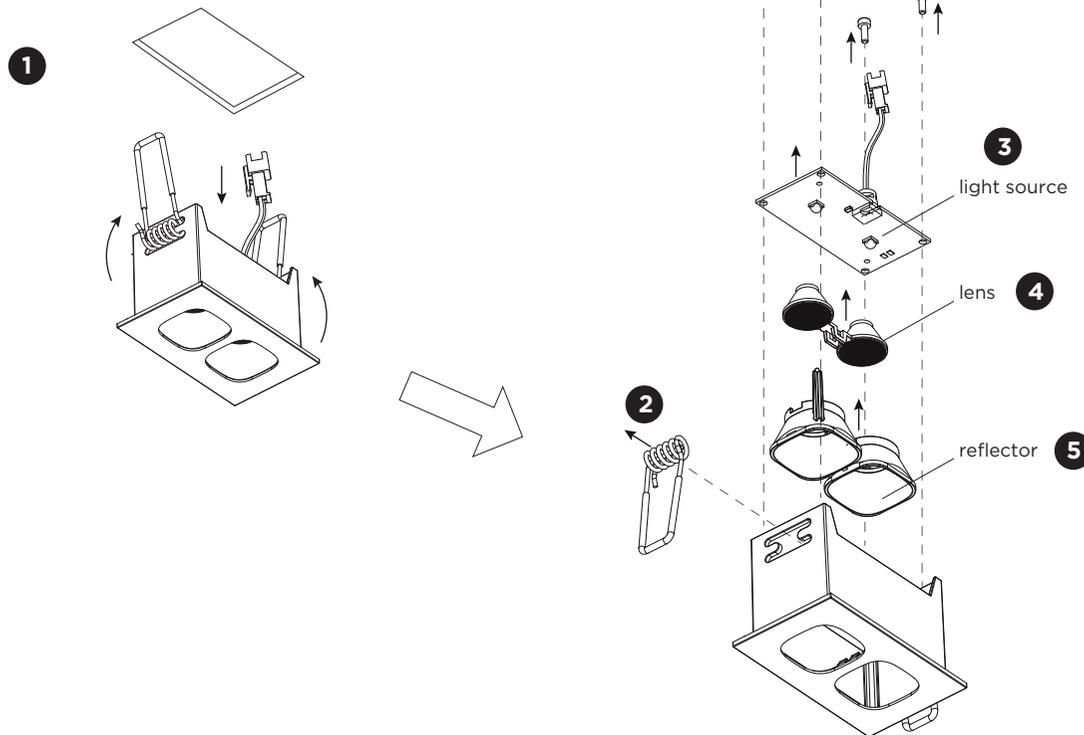

DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source

- 1 Take the luminaire out of the ceiling hole and unplug the wires.
- 2 Remove one of the springs.
- 3 Remove the screws and take out the cover plate containing the light sources on it.
- 4 Remove the lenses.
- 5 Remove the reflectors.



The light source is replaceable by an authorized professional.
For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class F.