


## **USER MANUAL**

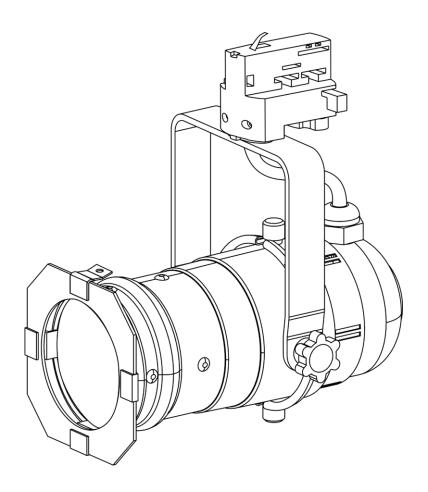

**ENGLISH** 

Par 20 Tracklight - Warm on Dim V1

Product code: A0320071

## **Preface**

Thank you for purchasing this Artecta product.

The purpose of this user manual is to provide instructions for the correct and safe use of this product.

Keep the user manual for future reference as it is an integral part of the product. The user manual shall be stored at an easily accessible location.

This user manual contains information concerning:

- Safety instructions
- Intended and non-intended use of the device
- Installation and operation of the device
- Maintenance procedures
- Troubleshooting
- Transport, storage and disposal of the device

Non-observance of the instructions in this user manual may result in serious injuries and damage of property.

©2021 Artecta. All rights reserved.

No part of this document may be copied, published or otherwise reproduced without the prior written consent of Highlite International.

Design and product specifications are subject to change without prior notice.

For the latest version of this document or other language versions, please visit our website <a href="www.highlite.com">www.highlite.com</a> or contact us at <a href="mailto:service@highlite.com">service@highlite.com</a>.

Highlite International and its authorized service providers are not liable for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss arising from the use of, or inability to use or reliance on the information contained in this document.



## Table of contents

1.	Introduction	3
1.		
1.3	—·	
1.3		
1.4		
1.3		
1.6	6. Symbols on the Information Label	4
2.	Safety	
2.		
2.2	2. Requirements for the User	6
3.	Description of the Device	7
3.		
3.2	2. Dimensions	7
3.3	3. Product Specifications	8
4	Installation and Deinstallation	9
4.		
4.		
4.3	3. Installation Site Requirements	9
4.4		9
4.		
4.	·	
4.		
4.8		
5.	Troubleshooting	13
6.	Maintenance	13
6.		
6.3	2. Preventive Maintenance	
	6.2.1. Basic Cleaning Instructions	13
6.3	3. Corrective Maintenance	14
7.	Transportation and Storage	14
7.		
7.5	2. Storage	14
8.	Disposal	14
9.	Approval	14



## 1. Introduction

## 1.1. Before Using the Product



Important

Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

After unpacking, check the contents of the box. If any parts are missing or damaged, contact your Highlite International dealer.

Your shipment includes:

- Artecta Par 20 Tracklight Warm on Dim (including track adapter)
- Color frame (installed)
- User manual

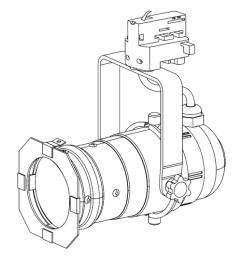


Fig. 01

#### 1.2. Intended Use

This device is intended for professional use as an architectural light spot. It is suitable for indoor installation in shops, exhibition halls, showrooms and similar venues. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

### 1.3. LEDs Lifespan

The light output of the LEDs gradually decreases over time (lumen depreciation). High operating temperatures contribute to this process. You can extend the lifespan of the LEDs by providing adequate ventilation and operating the LEDs at the lowest possible brightness.

#### 1.4. Text Conventions

Throughout the user manual the following text conventions are used:

• References: References to chapters and parts of the device are in bold lettering, for example:

"Refer to 2. Safety", "turn the adjustment handle (05)"

Notes: Note: (in bold lettering) is followed by useful information or tips



## 1.5. Symbols and Signal Words

Safety notes and warnings are indicated throughout the user manual by safety signs.

Always follow the instructions provided in this user manual.



DANGER Indicates an imminently hazardous situation which, if not avoided, will result in

death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in

death or serious injury.

CAUTION

Indicates a potentially hazardous situation, which, if not avoided, may result in

minor or moderate injury.

Attention Indicates important information for the correct operation and use of the

product.

**Important** Read and observe the instructions in this document.



## Electrical hazard

Provides important information about the disposal of this product.

## 1.6. Symbols on the Information Label

This product is provided with an information label. The information label is located on the mounting bracket.

The information label contains the following symbols:



This device is designed for indoor use.



This device falls under IEC protection class I.



This device shall not be treated as household waste.

## 2. Safety



#### Important

Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.



## 2.1. Warnings and Safety Instructions



DANGER
Danger for children

For adult use only. The device must be installed beyond the reach of children.

 Do not leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach. Packaging material is a potential source of danger for children.



# DANGER Electric shock caused by dangerous voltage inside

There are areas within the device where dangerous touch voltage may be present.

- Do not open the device or remove any covers.
- Do not operate the device if the covers or the housing is open. Before operation, check if the housing is firmly closed and all screws are tightly fastened.
- Disconnect the device from electrical power supply before service and maintenance.



## DANGER Electric shock caused by short-circuit

This device falls under IEC protection class I.

- Make sure that the device is electrically connected to ground (earth). Connect the device only to a track system with ground (earth) connection.
- Do not cover the ground (earth) connection.
- Do not bypass the thermostatic switch or fuses.
- For replacement use fuses of the same type and rating only.
- Do not modify, bend, mechanically strain, put pressure on, pull or heat up the interconnecting power cable.
- Make sure that the interconnecting power cable is not crimped or damaged. Examine the power cable periodically for any defects.
- Do not immerse the device in water or other liquids. Do not install the device in a location where flooding may occur.



## Attention Power supply

Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.



#### Attention General safety

- Do not shake the device. Avoid brute force when installing or operating the device.
- If the device fails to work properly, discontinue the use immediately.





#### **Attention**

This device shall be used only for the purposes it is designed for.

This device is intended for professional use as an architectural light spot. It is suitable for indoor installation in shops, exhibition halls, showrooms and similar venues.

- This device is not suitable for households.
- This device does not contain user-serviceable parts. Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.



#### **Attention**

Before use, examine the device visually for any defects.

#### Make sure that:

- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The interconnecting power cable is not damaged and does not show any material fatigue.



#### Attention

Do not expose the device to conditions that exceed the rated IP class conditions.

This device is IP20 rated. IP (Ingress Protection) 20 class provides protection against solid objects greater than 12 mm, such as fingers, and no protection against harmful ingress of water.

### 2.2. Requirements for the User

This product may be used by ordinary persons. Maintenance may be carried by ordinary persons. Installation and service shall be carried out only by instructed or skilled persons. Contact your Highlite dealer for more information.

Instructed persons have been instructed and trained by a skilled person, or are supervised by a skilled person, for specific tasks and work activities associated with the installation, service and maintenance of this product, so that they can identify risks and take precautions to avoid them.

Skilled persons have training or experience, which enables them to recognize risks and to avoid hazards associated with the installation, service and maintenance of this product.

Ordinary persons are all persons other than instructed persons and skilled persons. Ordinary persons include not only users of the product but also any other persons that may have access to the device or who may be in the vicinity of the device.




## 3. Description of the Device

The Artecta Par 20 Tracklight – Warm on Dim is a compact spot suitable for indoor venues. It features a warm-on-dim technology which mimics the dimming curve of a traditional tungsten lamp. At 100% output the color temperature is 2700 K and at 5% – 1800 K. The high CRI and the lack of UV radiation make it a good solution for clothing shops and galleries. The device is delivered with a color frame.

The device is equipped with a 3-phase track adapter. The 3-phase track adapter is compatible with the Artecta 3-phase track systems and with the most 3-phase tracks available on the market.


## 3.1. Front View

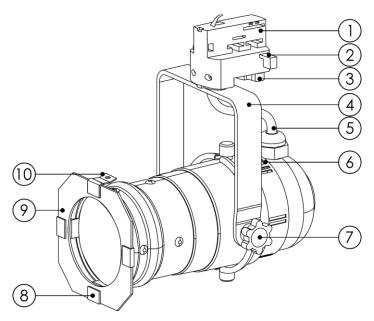

- 01) Track adapter
- 02) Track lock
- 03) Circuit selector (OFF, 1, 2 and 3)
- 04) Mounting bracket
- 05) Interconnecting cable
- 06) Ground connection
- 07) 2 x Adjustment screws
- 08) 3 x Color frame holders
- 09) Color frame
- 10) Color frame clip

Fig. 02

#### 3.2. Dimensions

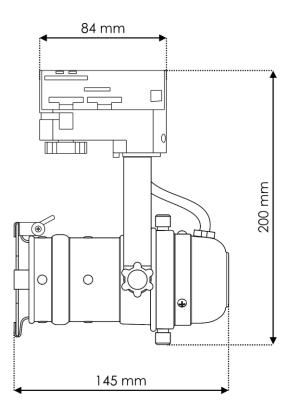

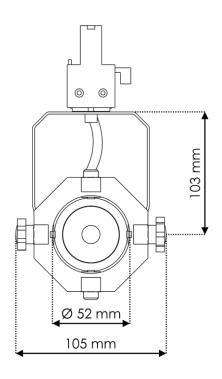


Fig. 03

## 3.3. Product Specifications

Model:	Par 20 Tracklight – Warm on Dim

Electrical:	
Input voltage:	100-240 V AC, 50/60 Hz
Power consumption:	15 W
PFC:	0,97

Physical:		
Dimensions:	172 x 117 x 210 mm (L x W x H) (with the track adapter)	
Weight:	0,42 kg (with the track adapter)	

Track adapter:	
Power connection:	220–250 V, 10 A
F max:	100 N
Phases:	3

Optics:		
Light source:	15 W LED	
Dimmer:	External, TRIAC type	
Beam angle:	45°	
Luminous flux:	800 lm	
CCT minimum:	1800 K	
CCT maximum:	2700 K	
CRI:	>95	

Construction:		
Housing:	Extruded aluminum	
Color:	Black	
IP rating:	IP20	
Cooling:	Natural convection	

Thermal:		
Maximum ambient temperature ta:	40 °C	
Minimum ambient temperature:	-5 ℃	

Minimum distance:	
Minimum distance from flammable surfaces:	0,5 m
Minimum distance to lighted object:	0,5 m



## 4. Installation and Deinstallation

## 4.1. Safety Instructions



#### WARNING

Incorrect installation and deinstallation can cause serious injuries and damage of property.

Installation and deinstallation of the device must be carried out only by instructed or skilled persons.

Follow all applicable European, national and local safety regulations concerning electrical installations in buildings and working at heights.

Before installing or deinstalling the device make sure that the track system is disconnected from power supply.

## 4.2. Personal Protective Equipment

During installation and deinstallation wear personal protective equipment in compliance with the national and site-specific regulations.

## 4.3. Installation Site Requirements

- The device can be used only indoors.
- The device can be mounted only to a 3-phase track system.
- The minimum distance to other objects must be bigger than 0,5 m.
- The maximum ambient temperature  $t_{\alpha}$  = 40 °C must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40 °C

## 4.4. Mounting

The device can be mounted only to a 3-phase track system.




### CAUTION

Restrict the access under the work area during mounting.

To mount the device, follow the steps below:

- 01) Disconnect the track system from the power supply.
- 02) Make sure that the **circuit selector (03)** is in OFF position and the **track lock (02)** is in unlocked position, as shown in Fig. 04.
- 03) Align the flange of the track adapter (01) with the track, as shown in Fig. 05.

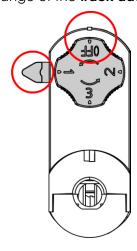




Fig. 04 Fig. 05



- 04) Insert the track adapter (01) in the track and push it until it snaps into place.
- 05) Turn the track lock (02) clockwise to lock the device in the track, as shown in Fig. 07.

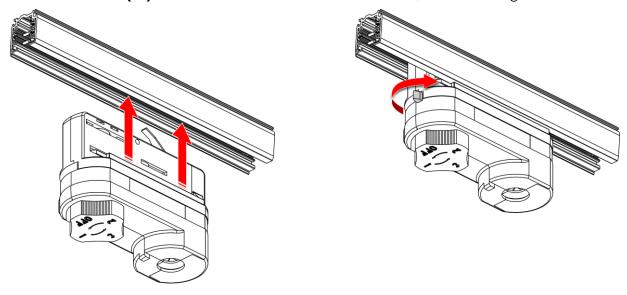



Fig. 06 Fig. 07

06) Select the circuit with the **circuit selector (03)**. You can select 1-, 2- and 3-phase circuit, as shown in Fig. 08.



#### **Attention**

Do not slide the track adapter in the track to adjust the position of the device (see Fig. 09). This can damage the connectors. Remove the device from the track and install it at the new place. For more information on how to remove the device from the track, refer to **4.5. Dismounting** on page 11.

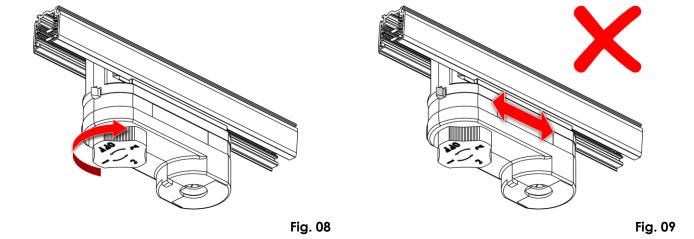

## 4.5. Dismounting



#### CAUTION

Restrict the access under the work area during dismounting.

To dismount the device, follow the steps below:

- 01) Disconnect the track system from the power supply.
- 02) Let the device cool down before dismounting.
- 03) Set the **circuit selector (03)** in OFF position, as shown in Fig. 10.


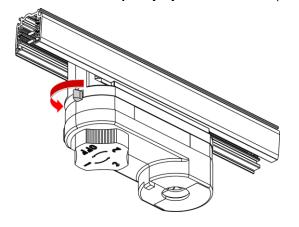


Fig. 10

- 04) Turn the track lock (02) counterclockwise to unlock the device (see Fig. 11).
- 05) Pull the track adapter (01) from the track (see Fig. 12).



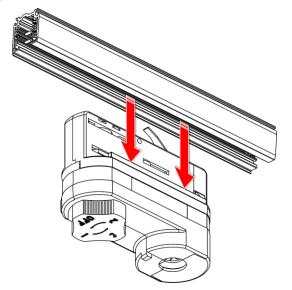
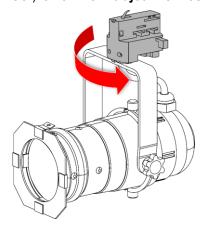


Fig. 11 Fig. 12

## 4.6. Direction Adjustment

To adjust the angle of the device and the direction of the beam, follow the steps below:

- 01) Pivot the device around the track adapter (01) to adjust the direction of the beam (see Fig. 13).
- 02) Turn the 2 adjustment screws (07) counterclockwise to release them.
- 03) Tilt the device at the desired angle (see Fig. 14).
- 04) Turn the 2 adjustment screws (07) clockwise to tighten them. Make sure that the device cannot move freely after the 2 adjustment screws (07) are tightened.



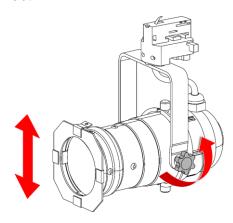
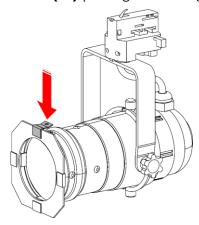


Fig. 13 Fig. 14

#### 4.7. Color Frame

The Par 20 Tracklight – Warm on Dim is delivered with the color frame installed. You can insert a color gel or a diffusion filter into the color frame. To remove the color frame, follow the steps below:

01) Press the color frame clip (10) and at the same time remove the color frame (09) from the color frame holders (08) (see Fig. 15 and Fig. 16).



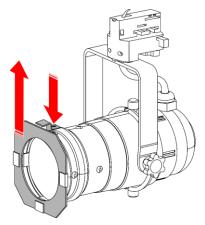


Fig. 15 Fig. 16

- 02) Insert a color gel or a diffusion filter into the color frame.
- 03) Press the color frame clip (10) and at the same time insert the color frame (09) into the color frame holders (08).
- 04) Release the **color frame clip (10)** to lock the color frame in position.

Make sure that the color frame is locked in position with the color frame clip before using the device.

## 4.8. Connecting to Power Supply

This device is suitable for mounting only to a 3-phase track system. The device is connected to power supply when it is mounted to the track system.

Before installing or deinstalling the device make sure that the track system is disconnected from power supply.



## 5. Troubleshooting

This troubleshooting guide contains solutions to problems which can be carried out by an ordinary person. The device does not contain user-serviceable parts.

Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

Refer servicing to instructed or skilled persons. Contact your Highlite International dealer in case the solution is not described in the table.

Problem	Probable cause(s)	Solution
	No power to the device	<ul> <li>Check if the track system is connected to the power supply</li> </ul>
The device does not function	Main fuse is blown	Disconnect the device and contact your Highlite International dealer
	LEDs are damaged	Disconnect the device and contact your Highlite International dealer
No light or LEDs cut out intermittently  The power supply settings do not match local AC voltage and frequency		Disconnect the device. Check the settings and correct, if necessary

## 6. Maintenance

## 6.1. Safety Instructions for Maintenance



DANGER Electric shock caused by dangerous voltage inside

Disconnect power supply before servicing or cleaning.

## 6.2. Preventive Maintenance



**Attention** 

Before use, examine the device visually for any defects.

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The interconnecting power cable is not damaged and does not show any material fatigue.

#### 6.2.1. Basic Cleaning Instructions

The external lens of the device must be cleaned periodically in order to optimize the light output. The cleaning schedule depends on the conditions at the site where the device is installed. When smoke or fog machines are used at the site, the device will need more frequent cleaning. On the other hand, if the device is installed in a well-ventilated area, it will need less frequent cleaning. To establish a cleaning schedule, examine the device at regular intervals during the first 100 hours of operation.



## Par 20 Tracklight - Warm on Dim

To clean the device, follow the steps below:

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 15 minutes.
- 03) Remove the dust collected on the external surface with dry compressed air and a soft brush.
- 04) Clean the lens with a damp cloth.
- 05) Dry the lens carefully with a lint-free cloth.



#### **Attention**

- Do not immerse the device in liquid.
- Do not use alcohol or solvents.

#### 6.3. Corrective Maintenance

The device does not contain user-serviceable parts. Do not open the device and do not modify the device.

Refer repairs and servicing to instructed or skilled persons. Contact your Highlite International dealer for more information.

## 7. Transportation and Storage

## 7.1. Instructions for Transportation

- Use the original packaging to transport the device, if possible.
- Always observe the handling instructions printed on the outer carton box, for example: "Handle with care", "This side up", "Fragile".

### 7.2. Storage

- Clean the device before storing. Follow the cleaning instructions in chapter **6.2.1. Basic Cleaning Instructions** on pages 13–14.
- Store the device in the original packaging, if possible.

## 8. Disposal



#### Correct disposal of this product

Waste Electrical and Electronic Equipment

This symbol on the product, its packaging or documents indicates that the product shall not be treated as household waste. Dispose of this product by handing it to the respective collection point for recycling of electrical and electronic equipment. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. For more detailed information about recycling of this product contact the local authorities or the authorized dealer.

## 9. Approval



Check the respective product page on the website of Highlite International (<a href="https://www.highlite.com">www.highlite.com</a>) for an available declaration of conformity.



